


# Polaris 360 Quick Disconnect Replacement Instructions

1. Unscrew the quick disconnect and remove it from the hose. Discard the old hose nut.
2. Remove the filter screen from the old quick disconnect by placing your finger inside the filter screen, applying pressure and pulling it out.
3. Rinse out the filter screen and press it firmly into the new quick disconnect.
4. Unscrew the pressure relief valve from the old quick disconnect and screw it into the new quick disconnect.
5. Use the new hose nut to connect the new quick disconnect to the hose.

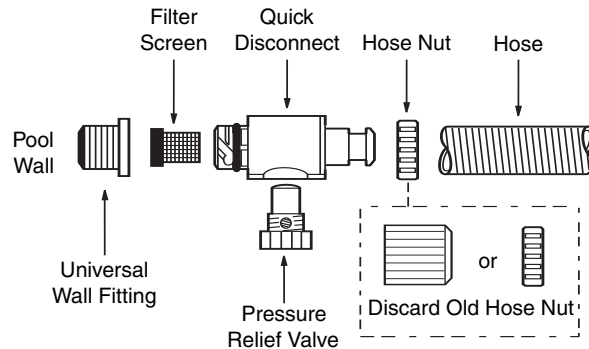


2620 Commerce Way, Vista, CA 92081-8438 • 760-599-9600 • 1-800-822-7933 • www.polarispool.com

© 2006 Polaris Pool Systems, Inc. All rights reserved. TL-821 6/06

# Polaris 360 Quick Disconnect Replacement Instructions

1. Unscrew the quick disconnect and remove it from the hose. Discard the old hose nut.
2. Remove the filter screen from the old quick disconnect by placing your finger inside the filter screen, applying pressure and pulling it out.
3. Rinse out the filter screen and press it firmly into the new quick disconnect.
4. Unscrew the pressure relief valve from the old quick disconnect and screw it into the new quick disconnect.
5. Use the new hose nut to connect the new quick disconnect to the hose.

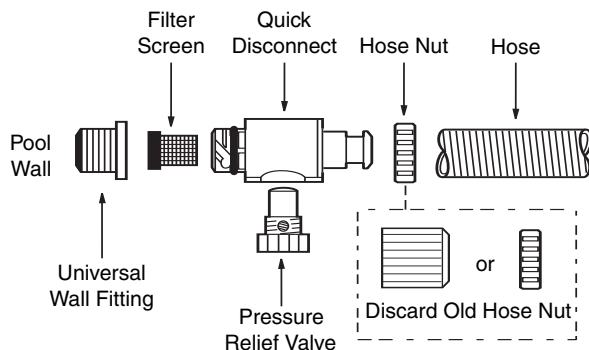

2620 Commerce Way, Vista, CA 92081-8438 • 760-599-9600 • 1-800-822-7933 • www.polarispool.com

© 2006 Polaris Pool Systems, Inc. All rights reserved. TL-821 6/06