

CUSTOM MOLDED PRODUCTS

VINYL LINER WALL JET

CMP# 25553-900

Coping

Pool

Wall

Wall Jet

Water

INSTALLATION INSTRUCTIONS:

This Wall Jet model must be mounted vertically in a pool wall above the water line.


Water specifications per each Jet:			
GPM	3.0	to	9.0
Feet of Head	3.9	to	11.9
Height of Jet	3.0	to	12.0

Wall Mount

- 1. Determine the water level of the pool and the vertical center line of each Wall Jet. If water covers the nozzle the jet will not operate correctly. In addition, if it is mounted too close to the coping the performance will also be affected.
- 2. Install the jet body as you would an inground vinyl liner return fitting with combo nut.
- 3. Plumb fitting with a ball valve to control flow to each jet.
- 4. Install liner as you would normally install with face plate and gasket.
- 5. Place Filter Foam into fitting.
- 6. Thread the Threaded Ring into fitting.
- 7. Place desired Eyeball Nozzle into fitting with the small flat around the holes going in first.
- 8. Check to make sure seal gasket is inside flange then thread flange into place.

NOTE: These eyeball nozzles do not take much water. Use the ball valve to create desired effect.

NOTE: Hand tighten flange. If leakage occurs, tighten slightly. DO NOT OVERTIGHTEN.

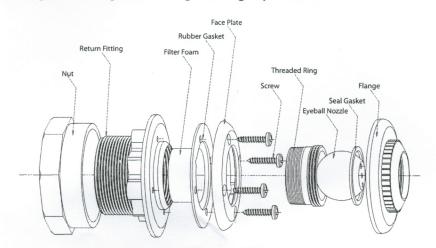

Eyeball Nozzle in 5 Different Spray Patterns: Fan Spray, 3 Stream, 3/16" Stream, 1/4" Stream, 5/16" Stream



This product must be installed and serviced by a pool and spa professional. These instructions must be followed exactly to ensure proper function of the parts.

10/09zv